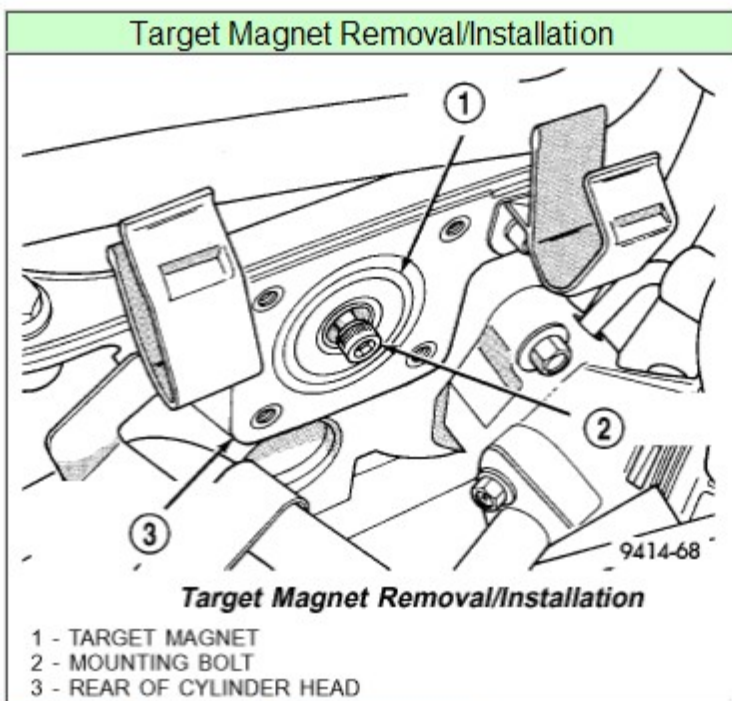


3. Disconnect electrical connectors from the camshaft position sensor.
4. Remove camshaft position sensor mounting screws. Remove sensor.

[Zoom](#)[Sized for Print](#)

5. Loosen screw attaching target magnet to rear of camshaft and remove magnet.