



## REMOVAL

1. Disconnect negative battery cable.
2. Disconnect electrical connector.
3. Remove manifold tuning valve mounting screws. Remove timing valve.

## INSTALLATION

1. Install tuning valve. Tighten mounting screws to **11 N.m (8 ft. lbs.)** torque.
2. Install electrical connector.
3. Connect negative battery cable.