


1991 Lexus LS 400 V8-4.0L (1UZ-FE)

Vehicle Level → Steering and Suspension → Suspension → Wheel Hub → Service and Repair → Front ←

Front

[Notes](#)

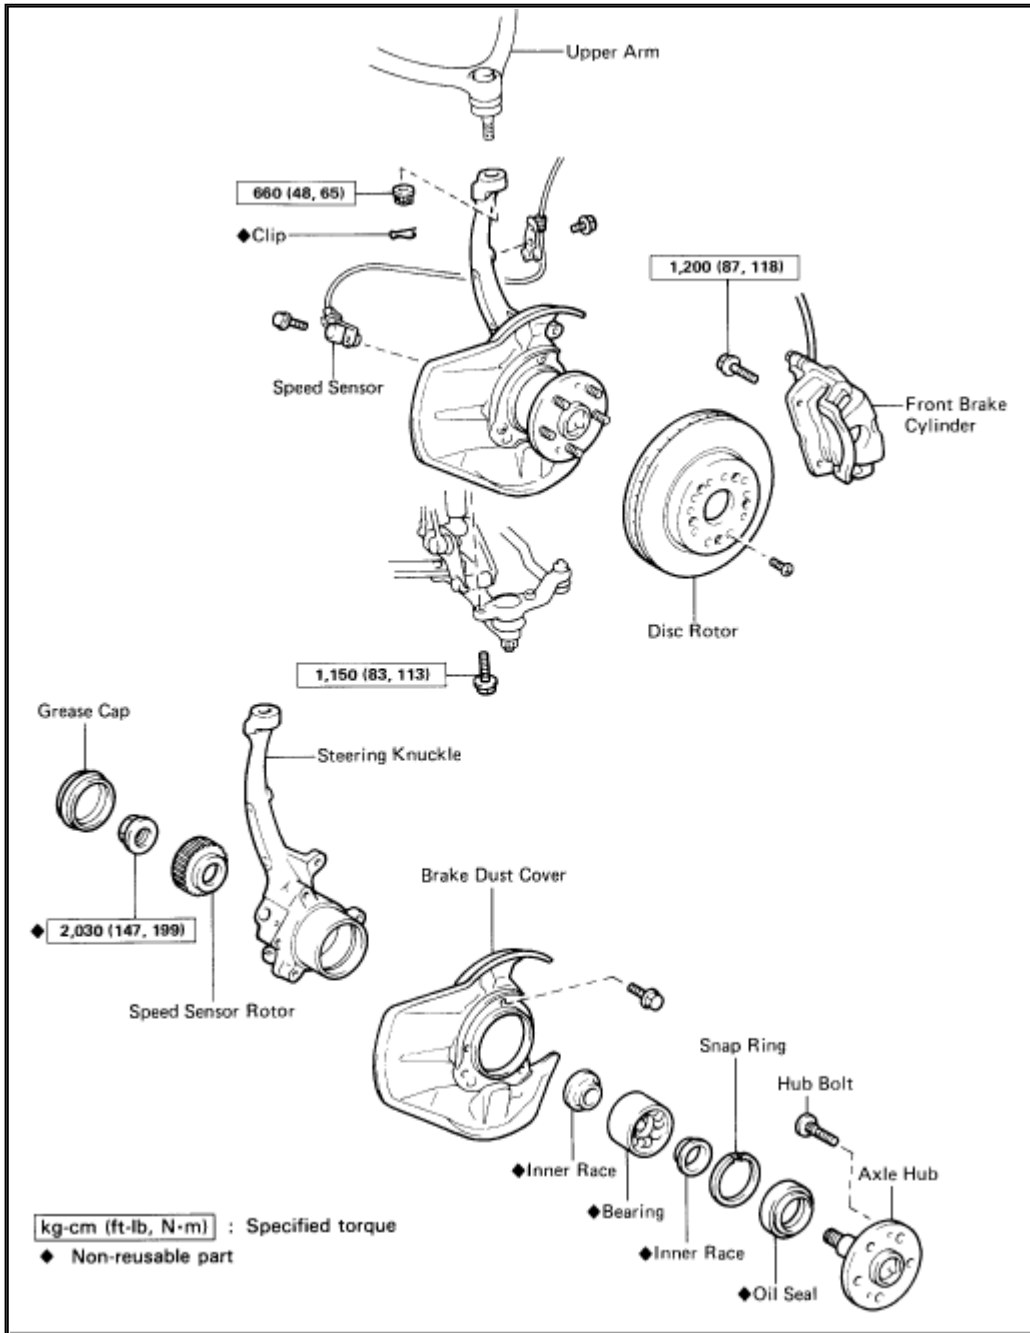


Zoom


Sized for Print

Front Axle Hub Components

REMOVAL OF STEERING KNUCKLE WITH AXLE HUB

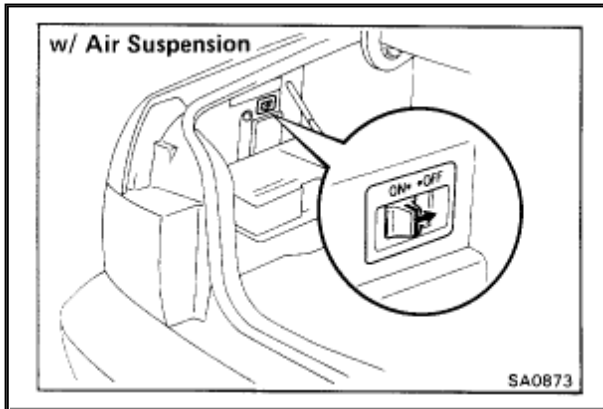
[Zoom](#)[Sized for Print](#)

1. (w/ AIR SUSPENSION) MOVE HEIGHT CONTROL ON/OFF SWITCH IN LUGGAGE COMPARTMENT TO "OFF"
2. JACK UP VEHICLE, REMOVE FRONT WHEEL

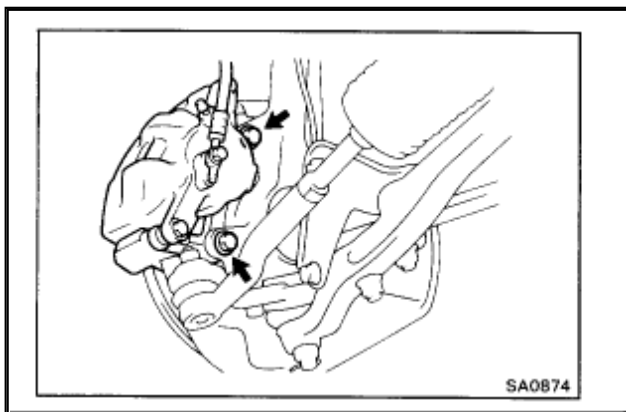
[Zoom](#)[Sized for Print](#)

3. REMOVE FRONT BRAKE CYLINDER AND DISC ROTOR
 - (a) Remove the two bolts and remove the brake cylinder from the steering knuckle.
 - (b) Hang up the brake cylinder using wire, etc.

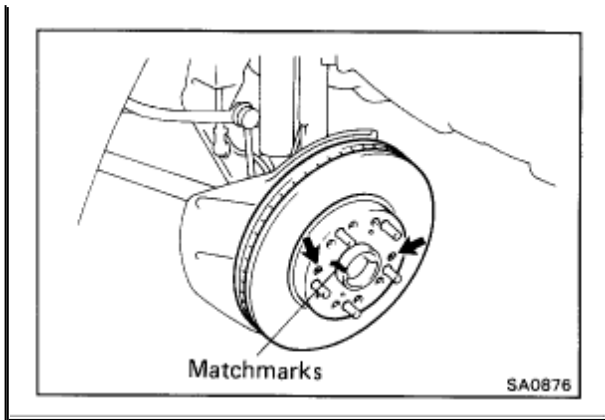


[Zoom](#)[Sized for Print](#)

- (c) Place matchmarks on the disc rotor and axle hub.
- (d) Remove the two screws and remove the disc rotor.

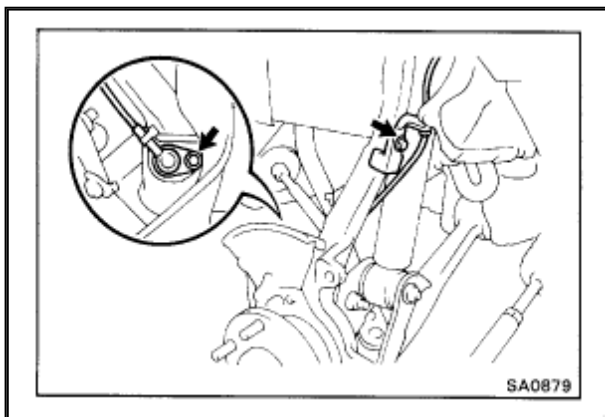
[Zoom](#)[Sized for Print](#)

4. REMOVE SPEED SENSOR FROM STEERING KNUCKLE

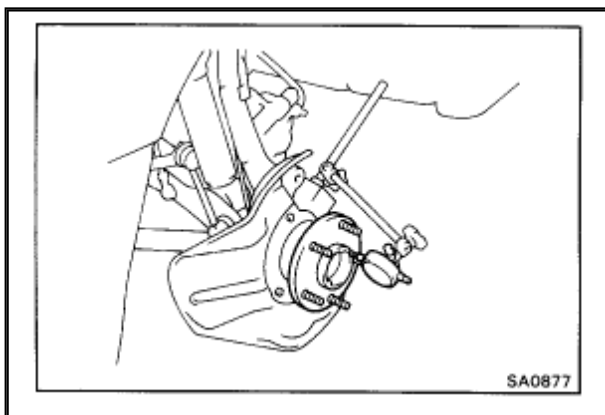


[Zoom](#)[Sized for Print](#)


5. CHECK BACKLASH IN BEARING SHAFT DIRECTION Place the dial indicator near the center of the axle hub and check the backlash in the bearing shaft direction. **Maximum: 0.05 mm (0.0020 in.)** If greater than the specified maximum, replace the bearing.

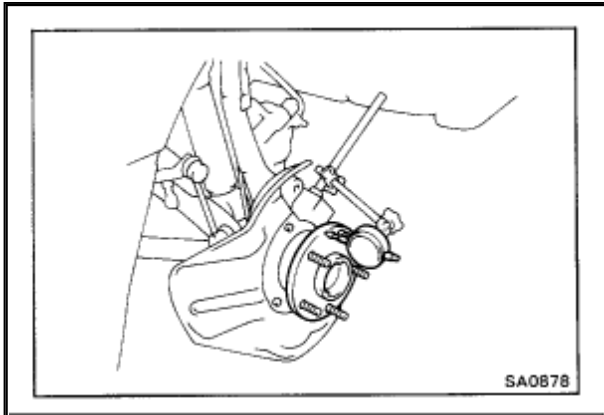[Zoom](#)[Sized for Print](#)

6. CHECK AXLE HUB DEVIATION Using a dial indicator, check the deviation at the surface of the axle hub outside the hub bolt. **Maximum: 0.05 mm (0.0020 in.)** If greater than the specified maximum, replace the axle hub.

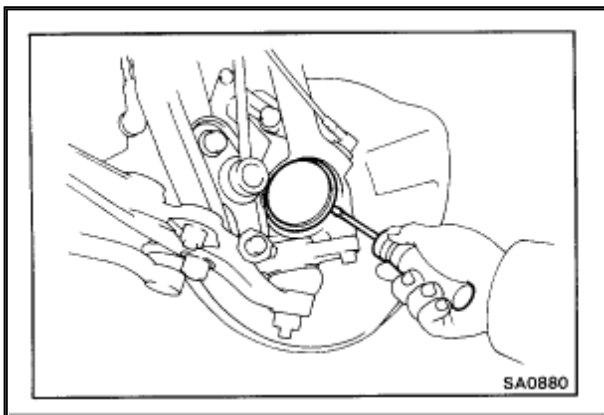
[Zoom](#)[Sized for Print](#)

7. LOOSEN AXLE SHAFT NUT **HINT:** When removing the axle hub from the steering knuckle, loosen the nut before hand.
- (a) Using a screwdriver, remove the grease cap from the steering knuckle.

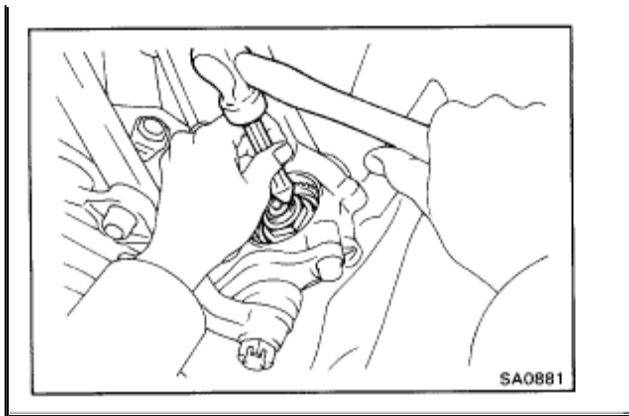[Zoom](#)[Sized for Print](#)

- (b) Using a chisel and hammer, release the nut caulking.
- (c) Install the disc rotor to the axle hub. Install the brake cylinder with two bolts to the steering knuckle.


Torque: 1,200kg-cm (87 ft-lb, 118 Nm)

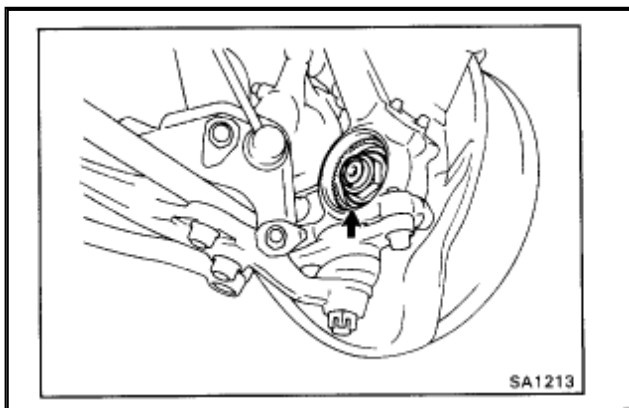[Zoom](#)[Sized for Print](#)


- (d) While applying the brakes, loosen the nut.

HINT: Remove the brake cylinder and disc rotor.

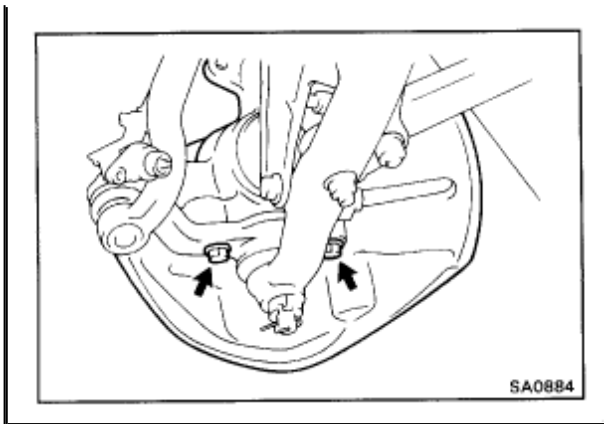

[Zoom](#)[Sized for Print](#)


8. REMOVE STEERING KNUCKLE FROM LOWER BALL JOINT Remove the two bolts and remove the steering knuckle from the lower ball joint.

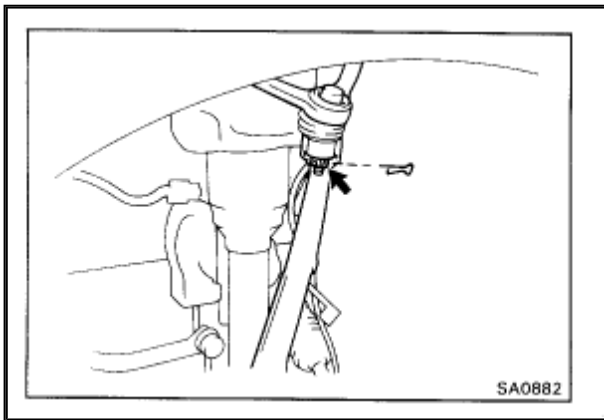[Zoom](#)[Sized for Print](#)

9. REMOVE STEERING KNUCKLE FROM UPPER BALL JOINT


- (a) Release the clip and remove the nut.

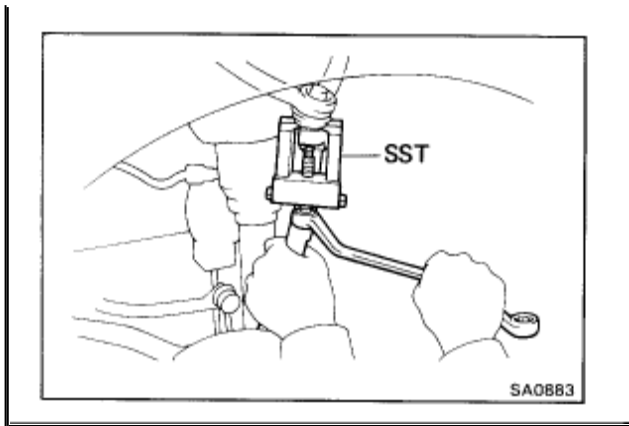

[Zoom](#)[Sized for Print](#)

- (b) Using SST, remove steering knuckle from upper ball joint. **SST 09628-62011** .

10. REMOVE STEERING KNUCKLE WITH AXLE HUB

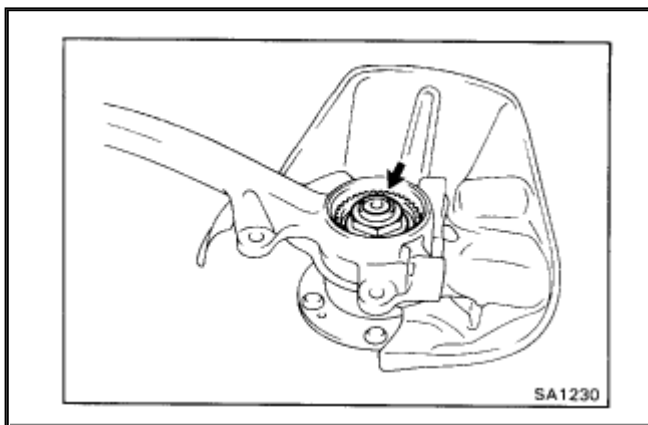
[Zoom](#)[Sized for Print](#)

DISASSEMBLY OF FRONT AXLE HUB

1. REMOVE NUT AND SPEED SENSOR ROTOR


- (a) Remove the nut.

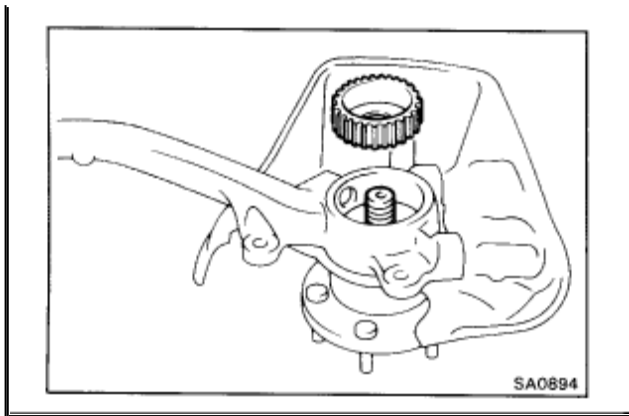

[Zoom](#)[Sized for Print](#)

(b) Remove the speed sensor rotor.


NOTICE: Take care to not scratch the serrations of the speed sensor rotor .

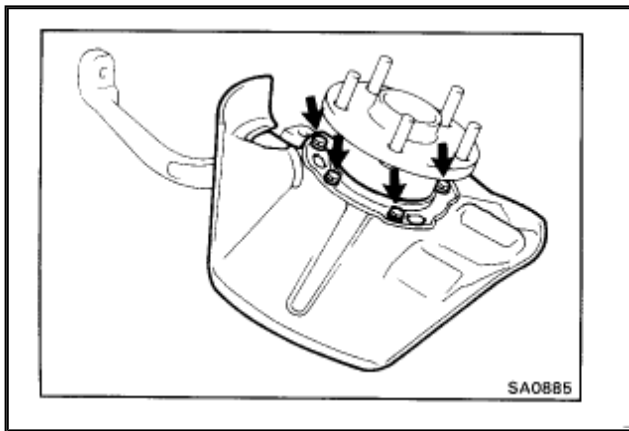[Zoom](#)[Sized for Print](#)


2. REMOVE AXLE SHAFT FROM STEERING KNUCKLE

(a) Remove the four bolts and shift the brake dust cover towards the hub side (outside).

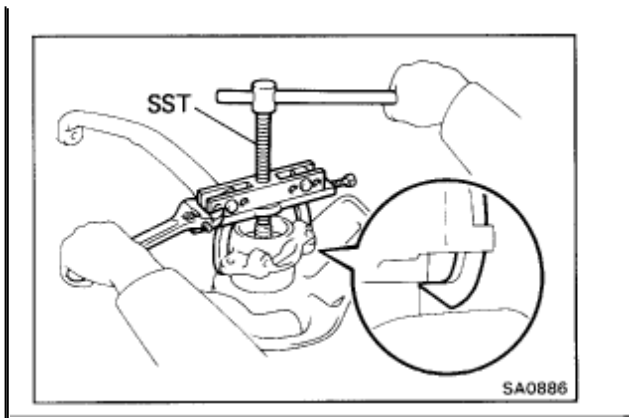


[Zoom](#)[Sized for Print](#)


- (b) Using SST, remove axle shaft from steering knuckle. **SST 09950-20017** .

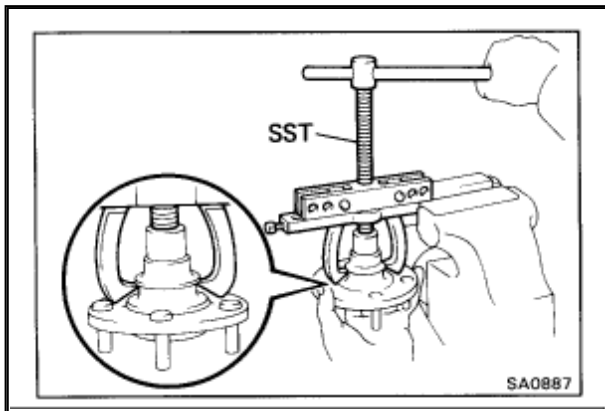[Zoom](#)[Sized for Print](#)

3. REMOVE INNER RACE (OUTSIDE) FROM AXLE SHAFT Using SST, remove the inner race from the axle shaft. **SST 09950-20017** .

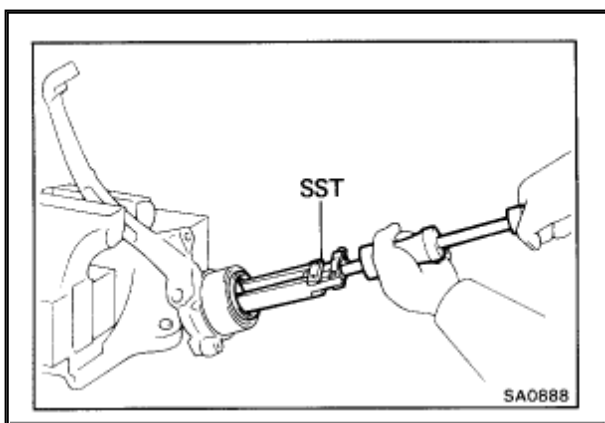[Zoom](#)[Sized for Print](#)

4. REMOVE OIL SEAL Using SST, remove oil seal from steering knuckle. **SST 09308-00010** .

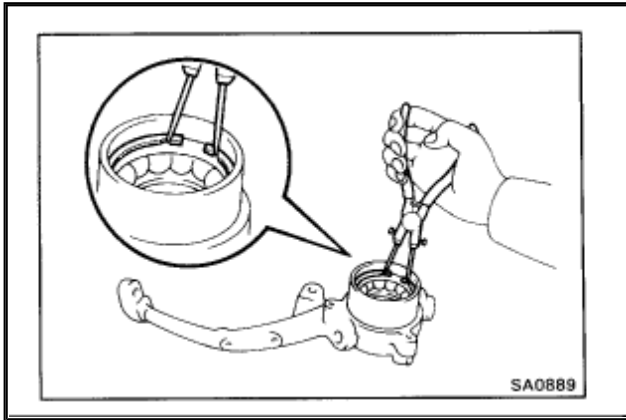


Zoom

Sized for Print

5. REMOVE BEARING FROM STEERING KNUCKLE

- (a) Using snap ring pliers, remove snap ring.

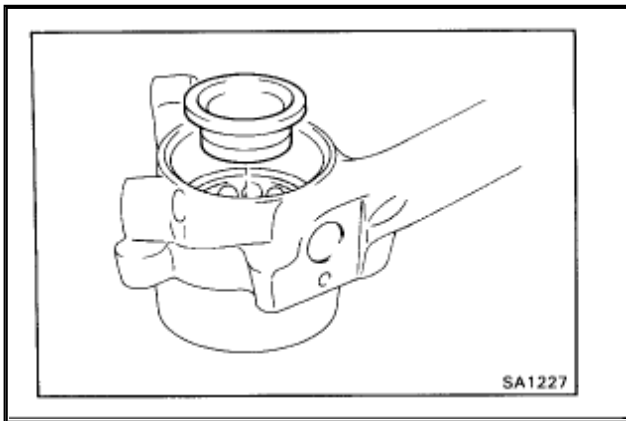


Zoom

Sized for Print

- (b) Place the inner race above the bearings on the inner side.




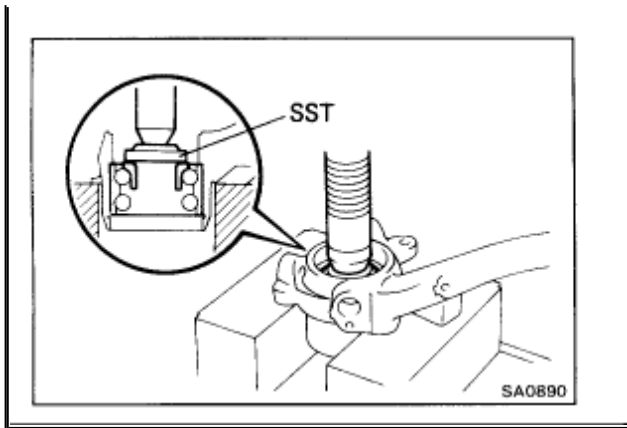

Zoom

Sized for Print

- (c) Using SST and press, remove the bearing from the steering knuckle. **SST 09608-35014 (09608-06100)** .

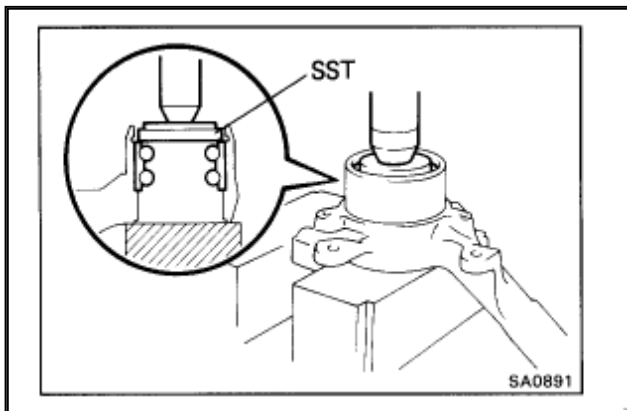

Zoom

Sized for Print


ASSEMBLY OF FRONT AXLE HUB

1. INSTALL BEARING

- (a) Using SST, install new bearing to steering knuckle. **SST 09608-35014 (09608-06200)** .

NOTICE: If the inner race and balls come loose from the bearing outer race, be sure to install them on the same side as before.




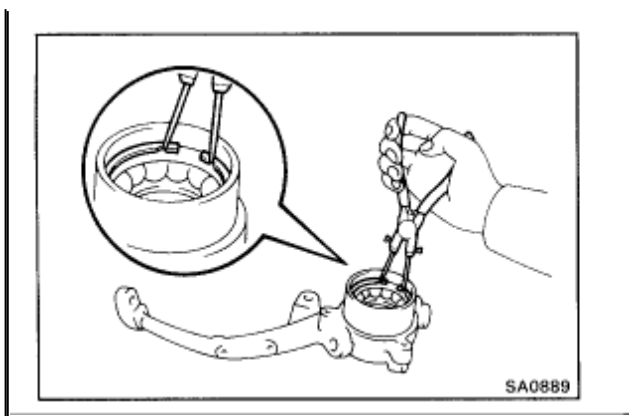

Zoom

Sized for Print

(b) Using snap ring pliers, install the snap ring.

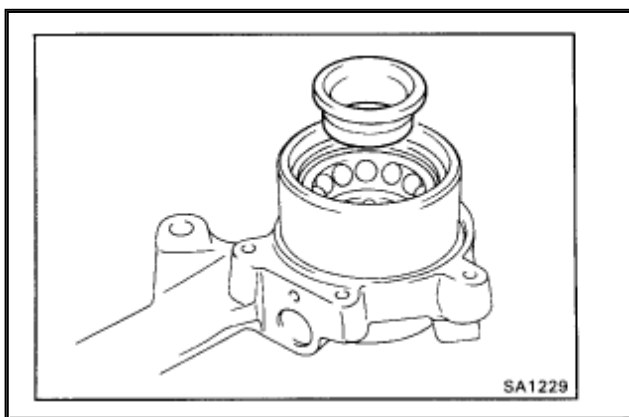


Zoom

Sized for Print


2. INSTALL OIL SEAL

(a) Install inner race (outside).

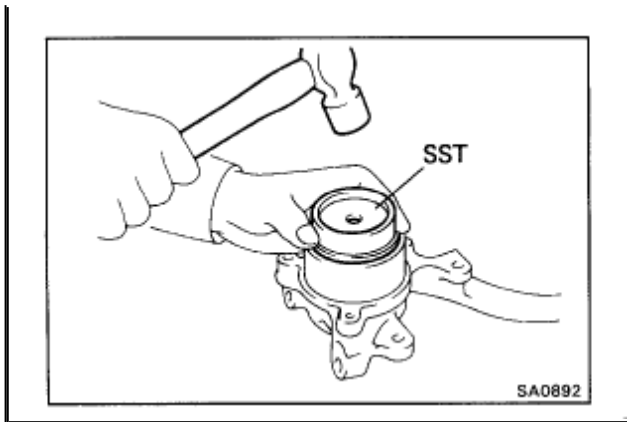


[Zoom](#)[Sized for Print](#)


- (b) Using SST, press in new oil seal until it is flush with end surface of steering knuckle. **SST 09608-32010** .

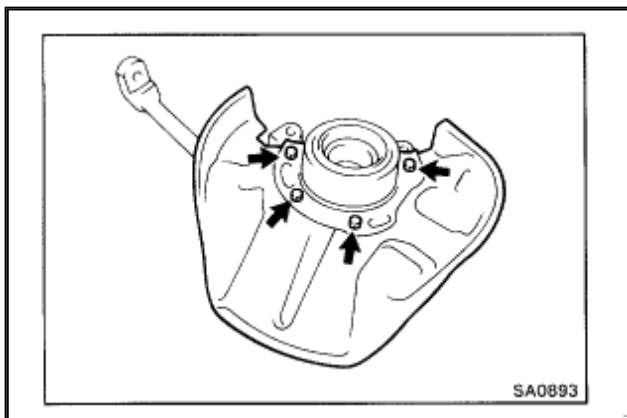[Zoom](#)[Sized for Print](#)


3. INSTALL AXLE HUB TO STEERING KNUCKLE

- (a) Install brake dust cover to steering knuckle with four bolts.




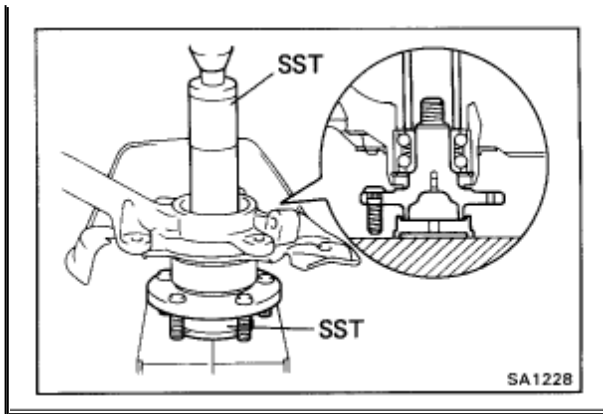[Zoom](#)[Sized for Print](#)

- (b) Using SST and press, install axle hub to steering knuckle. **SST 09608-32010, 09608-35014 (09608-06040)** .

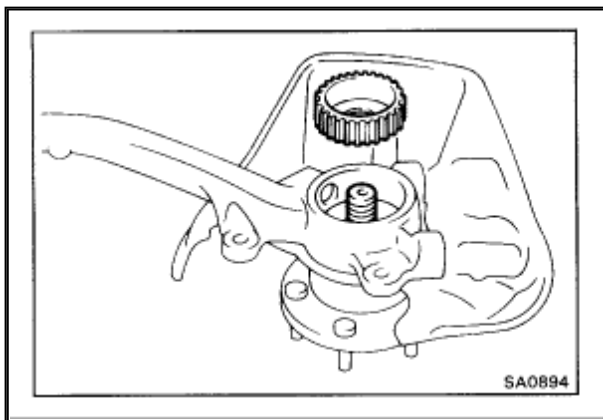
[Zoom](#)[Sized for Print](#)

4. **INSTALL SPEED SENSOR ROTOR NOTICE:** Do not scratch the serrations of the speed sensor rotor.

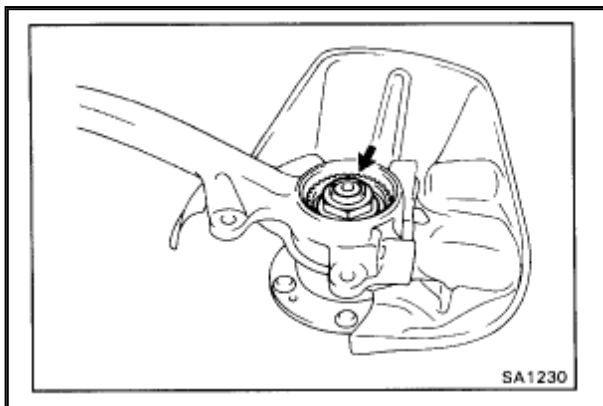


[Zoom](#)[Sized for Print](#)

5. **TEMPORARILY TIGHTEN NUT** Install a new nut to the axle hub and temporarily tighten it by hand. **HINT:** After installing the steering knuckle to the vehicle, tighten the nut to the specified torque.

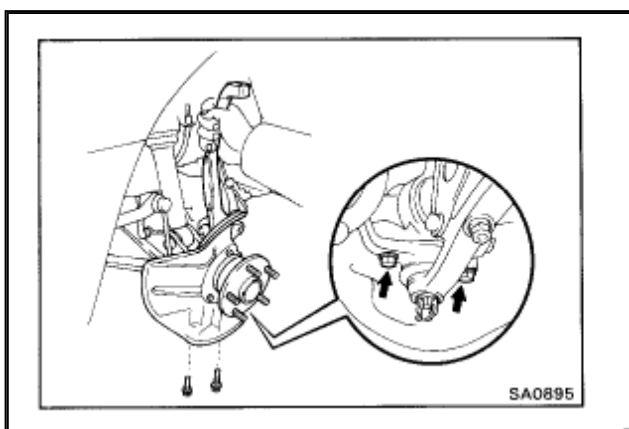[Zoom](#)[Sized for Print](#)

INSTALLATION OF STEERING KNUCKLE WITH AXLE HUB


1. **INSTALL STEERING KNUCKLE**
 - (a) Install steering knuckle to lower ball joint and temporarily tighten the two bolts.

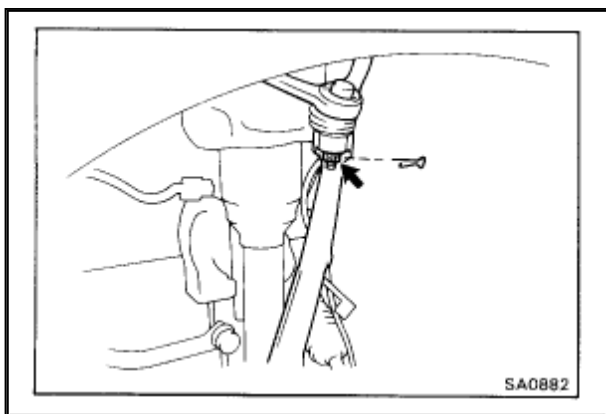[Zoom](#)[Sized for Print](#)

- (b) Install steering knuckle to upper arm and torque the nut.

Torque: 660 kg-cm (48 ft-lb, 65 Nm)


- (c) Install a new clip.

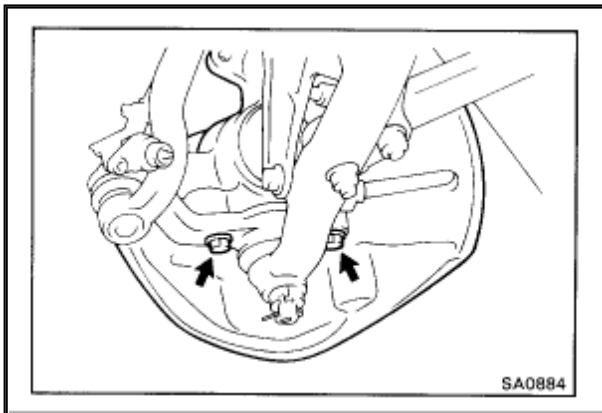

Zoom

Sized for Print

- (d) Torque the two bolts on the lower ball joint.
Torque: 1,150kg-cm (83 ft-lb, 113 Nm)

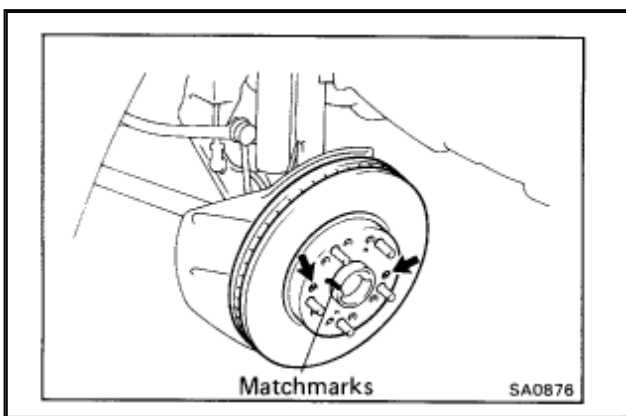


Zoom

Sized for Print


2. INSTALL FRONT BRAKE DISC ROTOR AND BRAKE CYLINDER

- (a) Align the matchmarks and install the disc rotor to the axle hub with two screws.

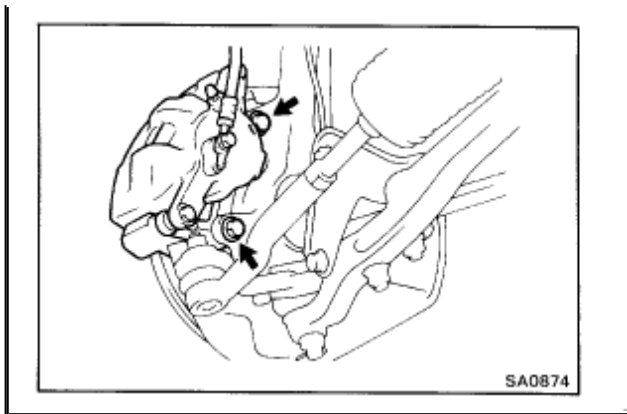

[Zoom](#)[Sized for Print](#)


- (b) Install the brake cylinder to the steering knuckle with the two bolts.
Torque: 1,200 kg-cm (87 ft-lb, 118 Nm)

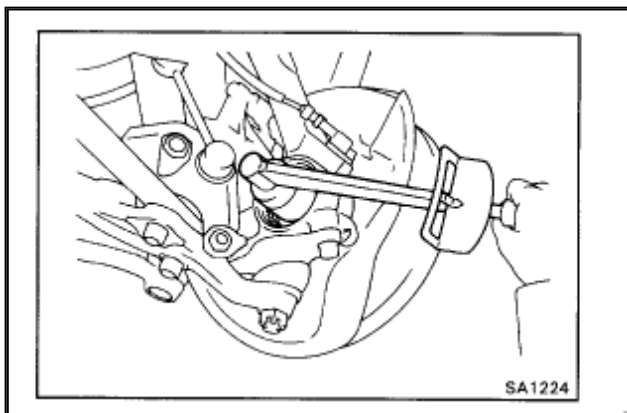[Zoom](#)[Sized for Print](#)


3. TORQUE AXLE SHAFT NUT

- (a) Torque the nut while applying the brakes.
Torque: 2,030 kg-cm (147 ft-lb, 199 Nm)

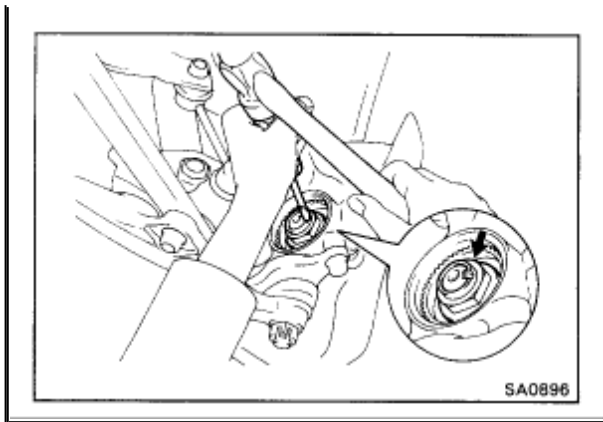

[Zoom](#)[Sized for Print](#)

(b) Caulk the nut.

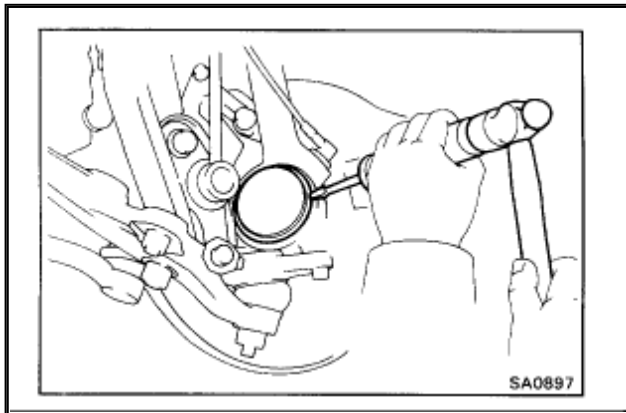[Zoom](#)[Sized for Print](#)

(c) Install the grease cap in the steering knuckle.

NOTICE INSTALL SPEED SENSOR TO STEERING KNUCKLE

5. INSTALL FRONT WHEEL AND LOWER VEHICLE **Torque: 1,050 kg-cm (76 ft-lb, 103 Nm)**
6. (w/ AIR SUSPENSION) MOVE HEIGHT CONTROL ON/OFF SWITCH IN LUGGAGE COMPARTMENT TO "ON"