

Select Vehicle | New TSBs | Technician's Reference

Component Search:


OK

Conversion Calculator

1987 Cadillac DeVille V8-252 4.1L

Vehicle Level → [Steering and Suspension](#) → [Steering](#) → [Steering Column](#) → [Service and Repair](#) → [Ignition Lock Cylinder](#) ←

Ignition Lock Cylinder

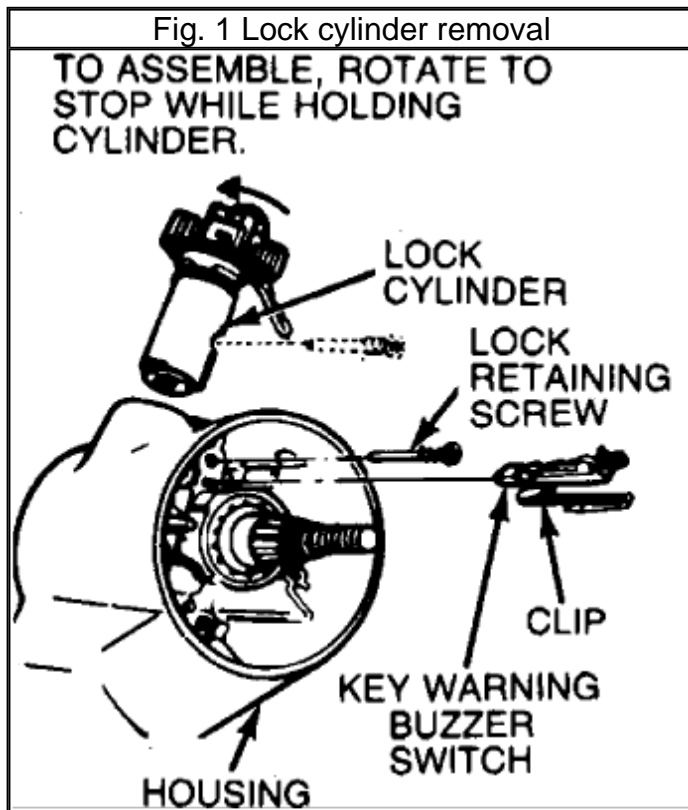

Zoom

Sized for Print

1. Remove [steering wheel](#) as outlined under "Steering Wheel, Replace" procedure.
2. Remove turn signal switch as outlined under "Turn Signal Switch, Replace" procedure.
3. Remove buzzer switch.
4. Turn lock cylinder to "Run" position, then remove lock cylinder retaining screw and the lock cylinder, **Fig. 1**.
5. To install, rotate lock cylinder to the stop while holding housing. Align cylinder key with keyway in housing, then push lock cylinder into housing until fully seated.
6. Install lock cylinder retaining screw.

7. Install buzzer switch, turn signal switch and [steering wheel](#).

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)