


**2000 Chevy Truck C 3500 Truck 2WD V8-5.7L VIN R**

Vehicle Level → Body and Frame → Doors, Hood and Trunk → Front Door Interior Handle → Service and Repair → Door Handle Replacement - Inside ←

**Door Handle Replacement - Inside**[Notes](#)**REMOVAL PROCEDURE****TOOLS REQUIRED**

J34940 Rivet Gun

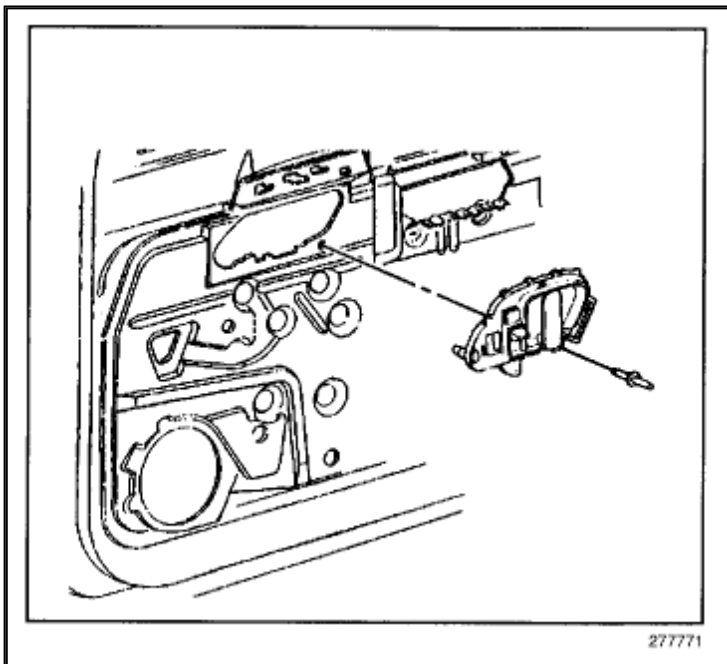


Zoom

Sized for Print

1. Remove the [trim panel](#).
2. Remove the water deflector.
3. Remove the inside door handle assembly by completing the following steps:
  - Drill out the rivet head using a **5 mm (0.2-in)** drill bit.
  - Slide forward the door handle.
4. Disconnect the control rods from the handle and the lock lever.

**INSTALLATION PROCEDURE**

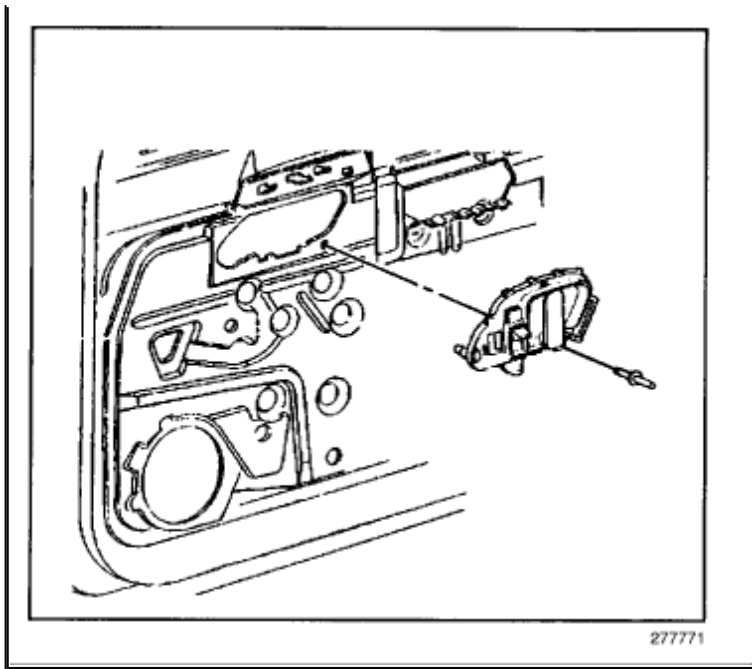

Zoom

Sized for Print

1. Connect the control rods to the handle and the lock lever.
2. Install the inside door handle by completing the following steps:
  - Insert the handle assembly into the slot.
  - Slide the assembly to the rear.
  - Using the J34940, install the handle rivet.
3. Install the water deflector.
4. Install the [trim panel](#).

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)