


2000 Chevy Truck C 3500 Truck 2WD V8-5.7L VIN R

Vehicle Level → Body and Frame → Doors, Hood and Trunk → Front Door Interior Handle → Service and Repair → Door Handle Replacement - Inside ←

Door Handle Replacement - Inside[Notes](#)**REMOVAL PROCEDURE****TOOLS REQUIRED**

J34940 Rivet Gun

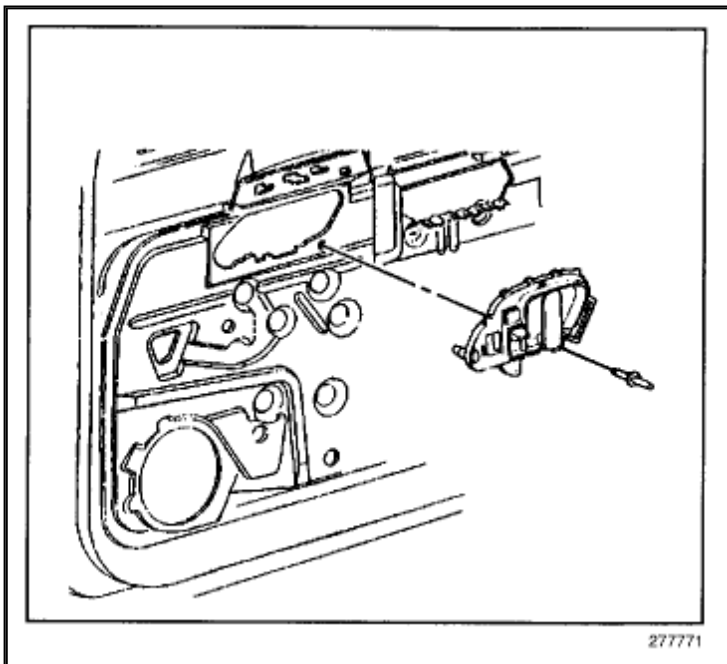


Zoom

Sized for Print

1. Remove the [trim panel](#).
2. Remove the water deflector.
3. Remove the inside door handle assembly by completing the following steps:
 - Drill out the rivet head using a **5 mm (0.2-in)** drill bit.
 - Slide forward the door handle.
4. Disconnect the control rods from the handle and the lock lever.

INSTALLATION PROCEDURE

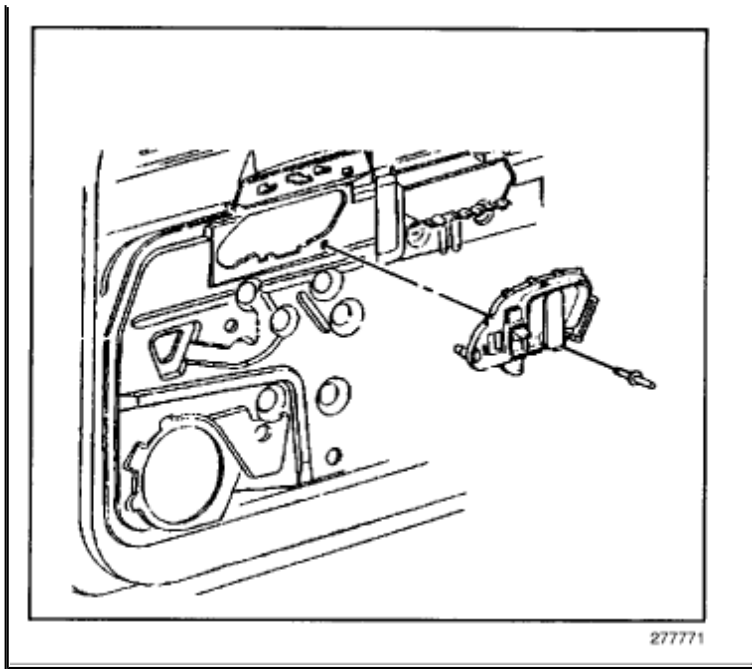

Zoom

Sized for Print

1. Connect the control rods to the handle and the lock lever.
2. Install the inside door handle by completing the following steps:
 - Insert the handle assembly into the slot.
 - Slide the assembly to the rear.
 - Using the J34940, install the handle rivet.
3. Install the water deflector.
4. Install the [trim panel](#).

© 2010 ALLDATA LLC. All rights reserved.

[Terms of Use](#)