


1999 Mercury Grand Marquis V8-4.6L VIN W

[Vehicle Level](#) → [Powertrain Management](#) → [Emission Control Systems](#) → [Canister Purge Solenoid](#) → [Service and Repair](#) ←

Service and Repair


[Notes](#)

REMOVAL

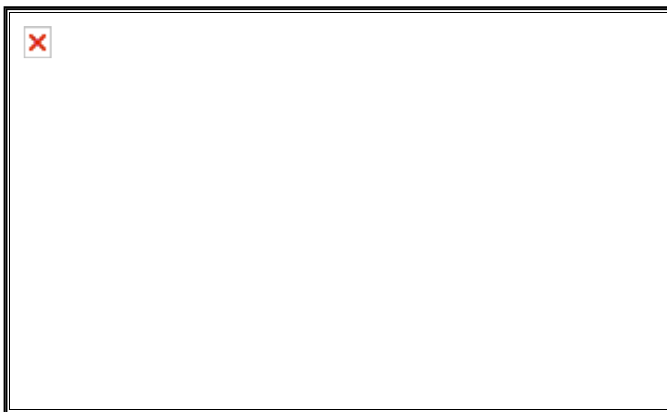


1. Lower the EVAP canister with bracket assembly.


- Remove the bolts.
- Lower the EVAP canister with bracket assembly.

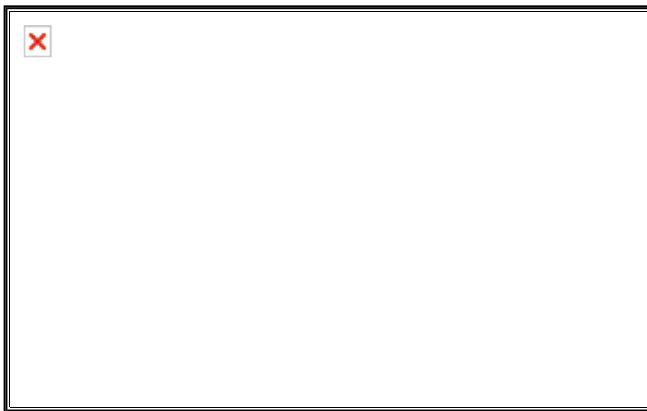

2. Disconnect the connector from the canister vent solenoid.

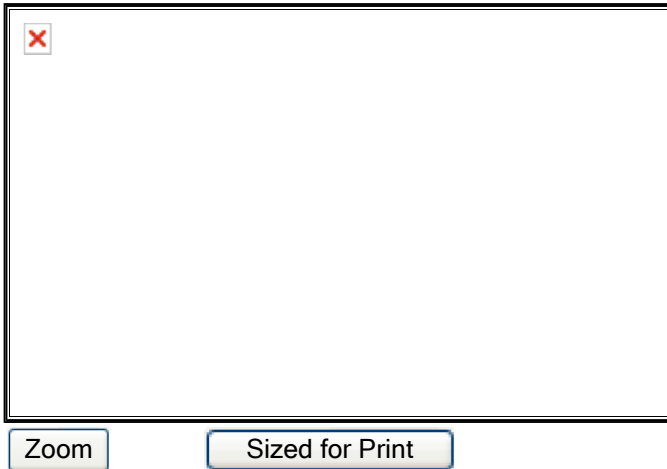

3. Remove the canister vent solenoid hose assembly from the canister vent solenoid.

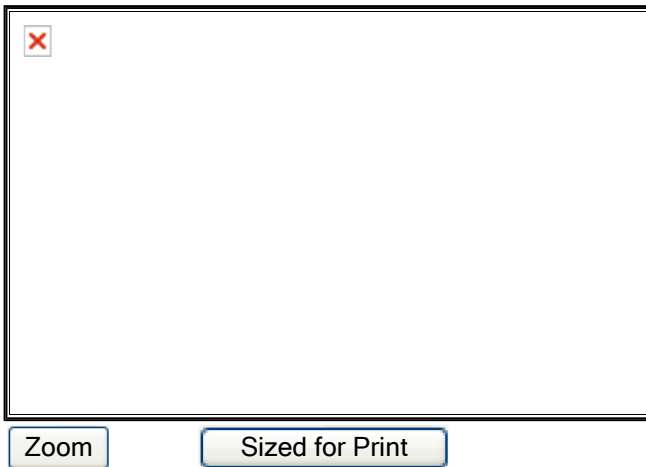


4. Remove the canister vent solenoid.

INSTALLATION

NOTE: Lubricate all O-rings with ESE-M99B144-B Mergol or water.



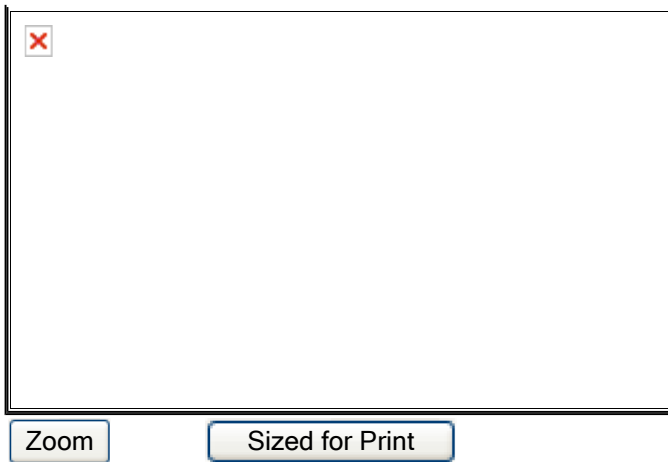

1. To install, reverse the removal procedure.
2. Leak test the canister and bracket assembly.
3. Leak test the system.
4. Perform the Evaporative Emission Running Loss Monitor Repair Verification Drive Cycle.

© 2010 ALLDATA LLC. All rights reserved.
[Terms of Use](#)