


ALLDATA REPAIR**2006 Jaguar XJ (X350) V8-4.2L
Fuel Filler Neck Service and Repair, Procedures****Fuel Tank Filler Pipe (19.55.33)****Removal****WARNING:**


- Place the vehicle in a quarantined area and arrange 'No Smoking/Petrol Fumes' signs about the vehicle.
- Before any work is carried out on the fuel system, ground the vehicle to earth and maintain the ground connection until the work is complete.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- The fuel system remains pressurized for a long time after the ignition is switched off. The fuel pressure must be relieved before attempting any repairs. Failure to follow these instructions may result in personal injury.
- After carrying out repairs, the fuel system must be checked visually for leaks. Failure to follow these instructions may result in personal injury.
- This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions may result in personal injury.
- If taken internally do not induce vomiting, seek immediate medical attention. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek medical attention.
- Wash hands thoroughly after handling, as prolonged contact may cause irritation. Should irritation develop, seek medical attention.

CAUTION: Ensure filler hose worm drive retaining clip is not overtightened. Failure to follow these instructions may result in damage to the fuel tank assembly.


1. Remove the fuel tank filler pipe cap.
2. Remove the wheel and tire assembly.
3. Remove the rear fender splash shield retaining screws.

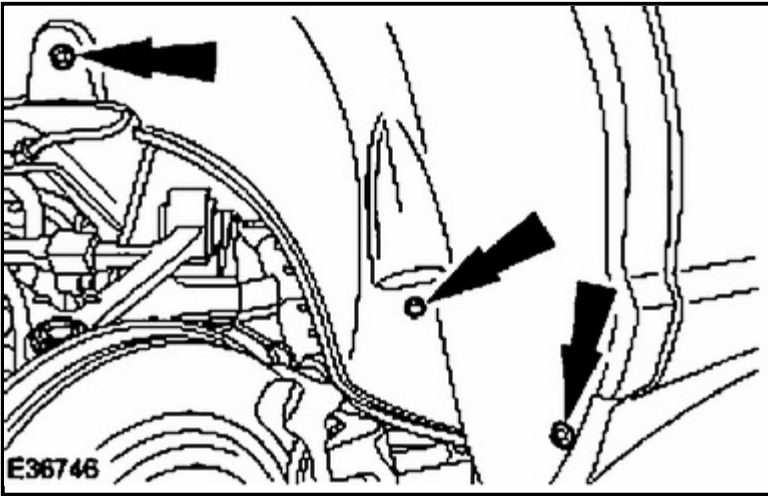

4. Remove the rear fender splash shield.

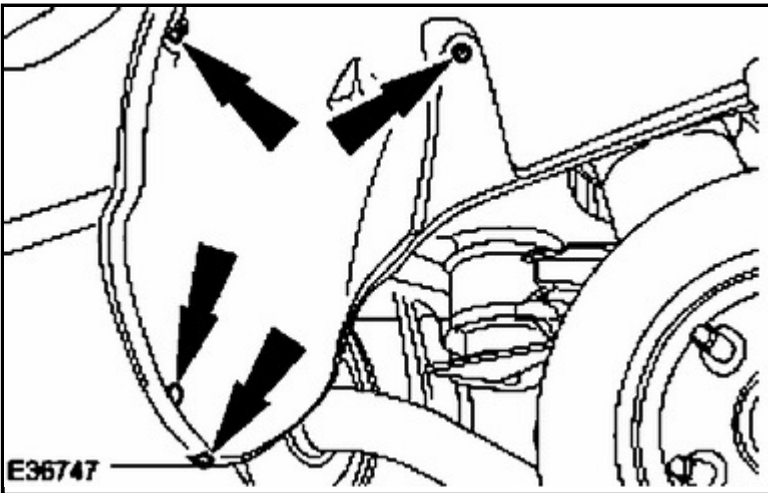


- 5. Remove the right-hand rear muffler.
- 6. Remove the exhaust heat shield.

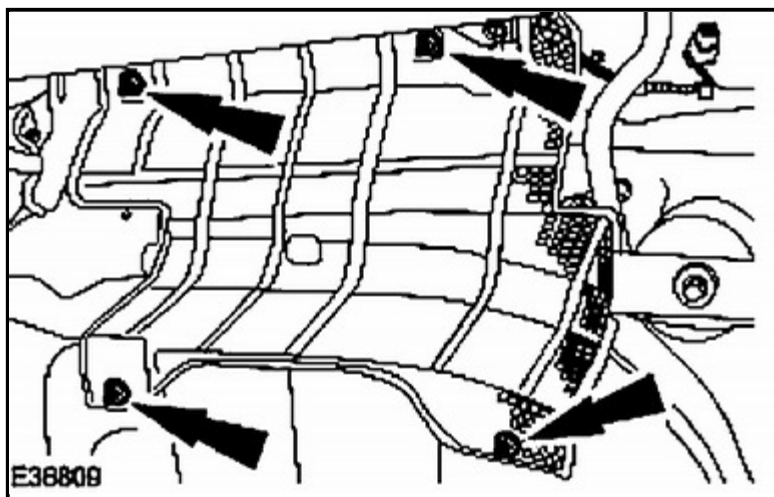


7. Detach the fuel filler pipe.


- Release the fuel filler hose retaining clip.
- Remove the fuel filler pipe securing bolt.

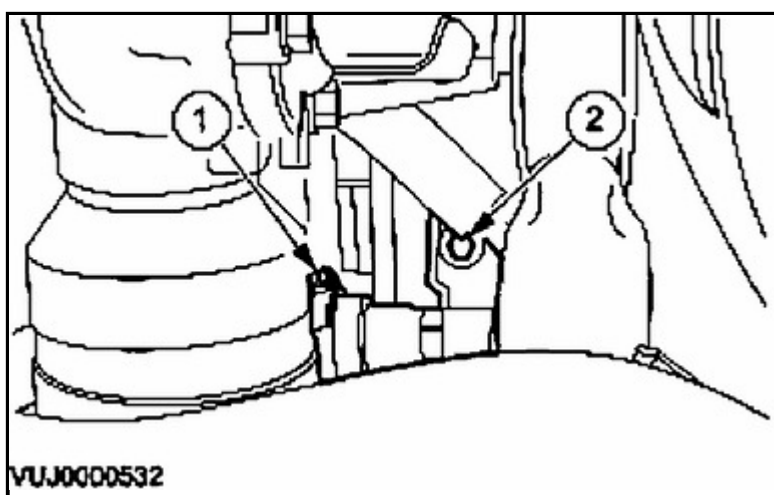


8. Detach the fuel filler pipe.

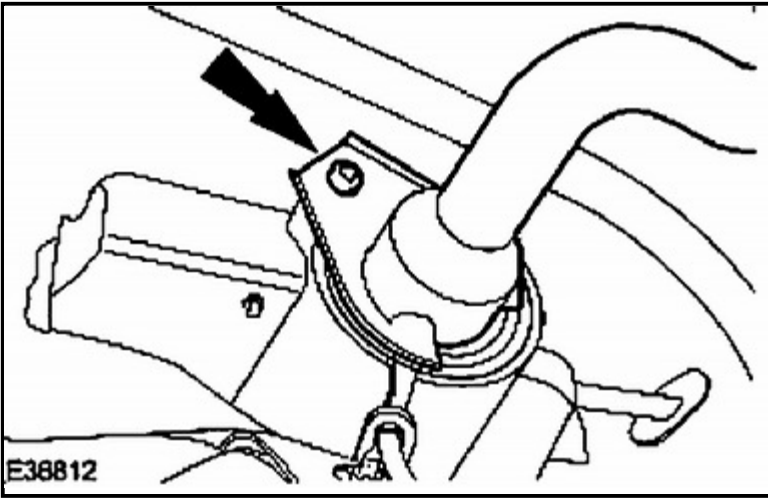

9. Detach the fuel filler pipe.

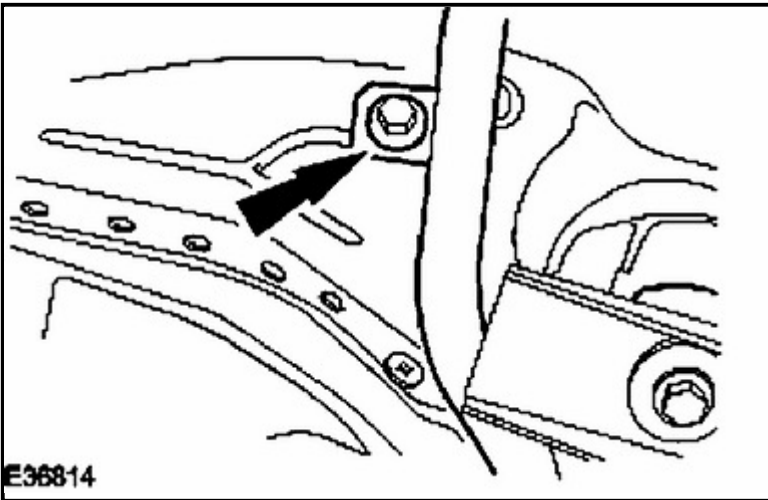


10. Remove the fuel filler pipe.

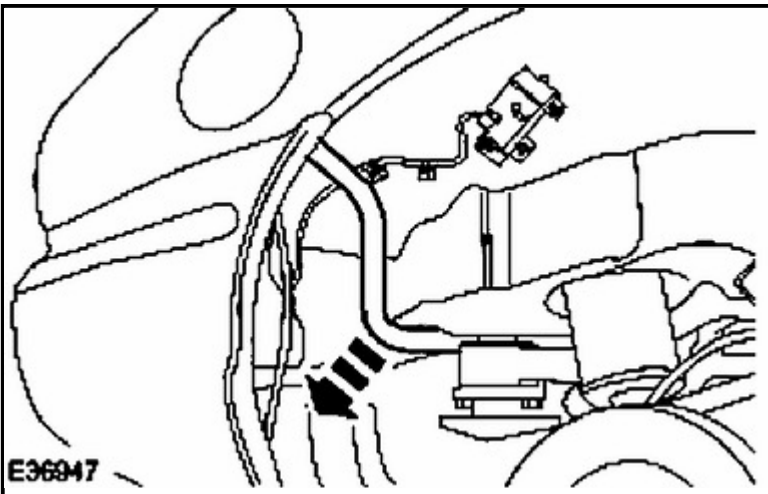


Installation


1. Install the fuel filler pipe.

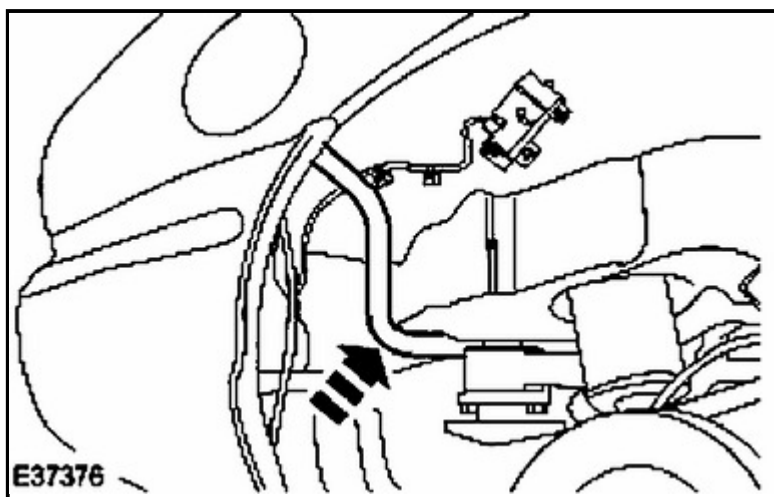

2. Attach the fuel filler pipe.
 - Tighten to **5 Nm**.

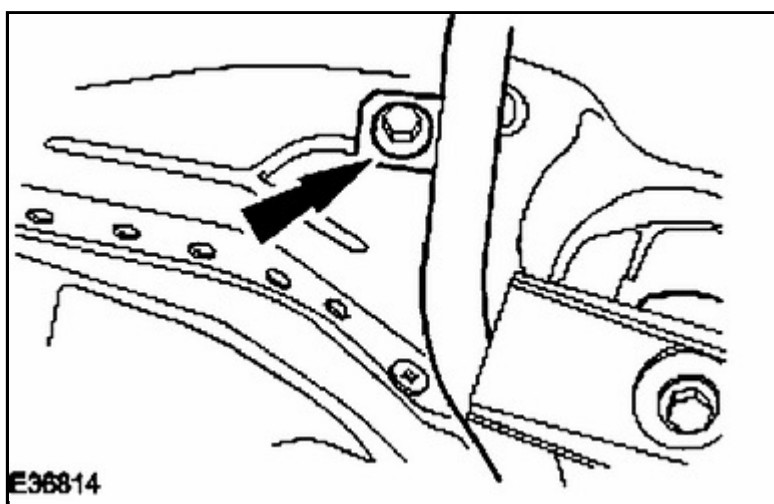


3. Attach the fuel filler pipe.
 - Tighten to **4 Nm**.

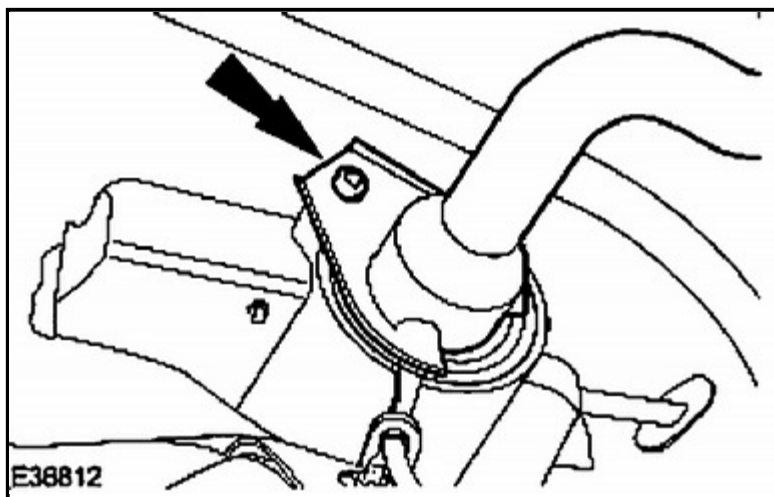


4. Attach the fuel filler pipe.


- Tighten to **2 Nm**.
- Tighten to **5 Nm**.

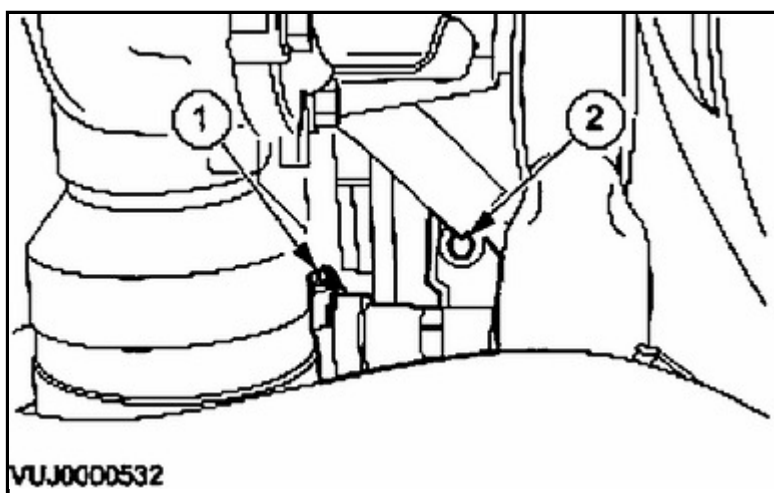


5. Install the exhaust heat shield.

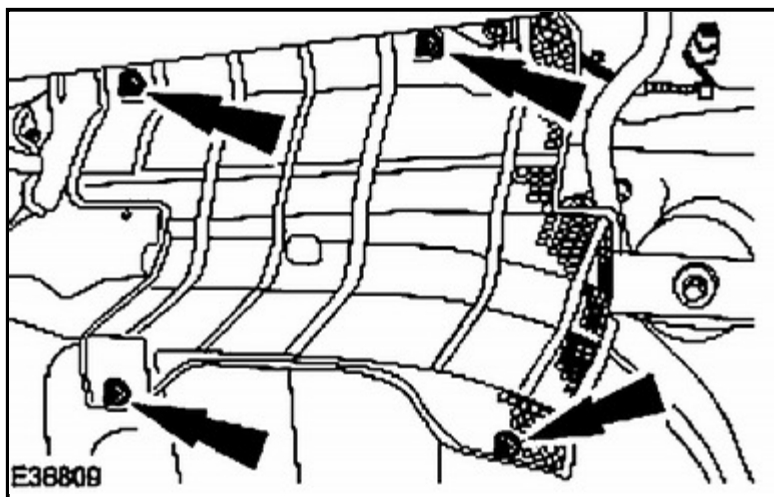

6. Install the rear fender splash shield.
 - Refit the rear fender splash shield retaining screws.

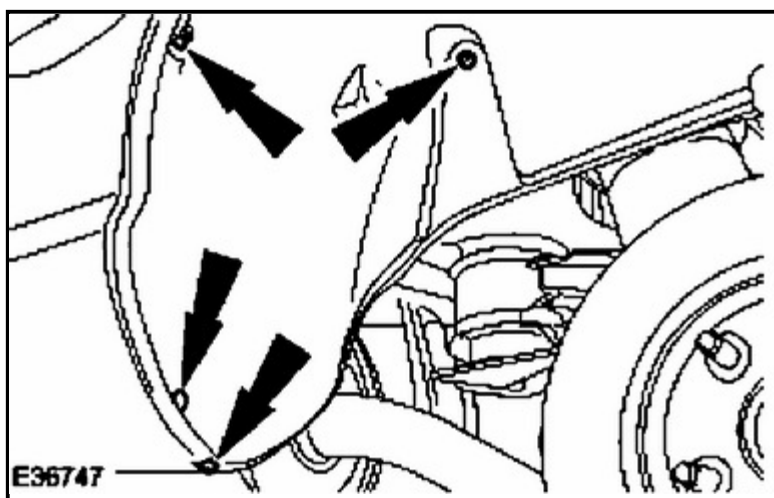

7. Install the rear fender splash shield retaining screws.

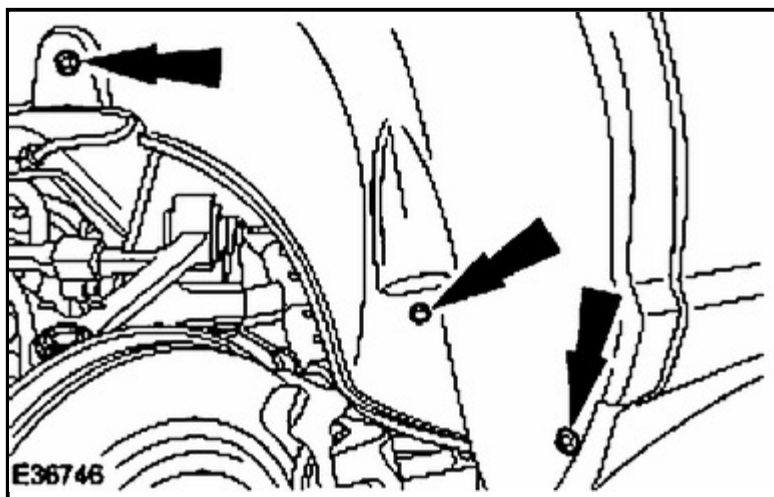

8. Install the wheel and tire assembly.
9. Install the fuel tank filler pipe cap.

© 2012 ALldata, LLC. All Rights Reserved. (Version 2.0.12172)