


**Specifications**  
**D3 TRACTOR POWER TRAIN**

**Transmission And Governor Control (Attachment)**

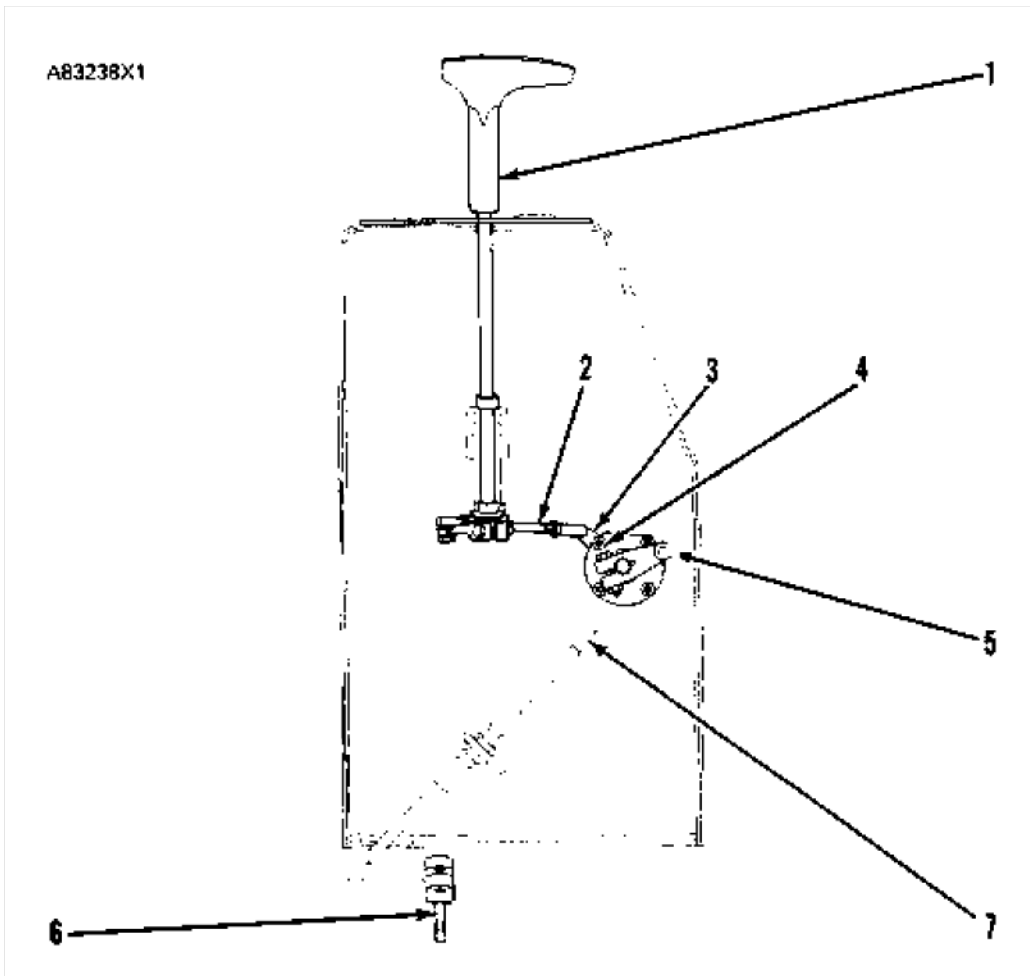

With governor lever in maximum shut-off position, control lever (1) must be in the position shown.

Disconnect the governor cable at the fuel tank end.

Put governor lever (6) in the shut-off position.

Move lever (3) until it is in alignment with the upper left bolt (4) of the detent mechanism as shown.

With the lever (3) in the position shown, adjust the clevis on cable (7) and connect the clevis to lever (5).

Adjust the length of rod (2) so the distance between the center of the pins for the rod is 5.31 in. (135.0 mm)