Mirror — Cover, Exterior Rear View Mirror

Removal

All Mirrors

NOTE: All mirrors have two upper clips. Mirrors that are not equipped with optional turn signals have two additional clips.

1. Access the two upper clips.
   - Position the mirror glass to obtain a gap at the upper edge of the mirror assembly.

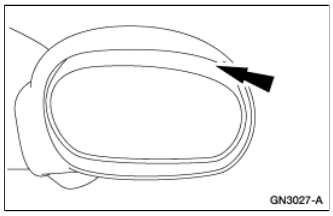

2. Use a screwdriver or similar tool to release the two mirror cover upper clips.

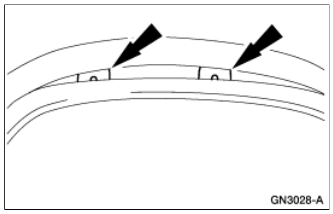

Non-Signal Mirror

NOTE: Mirrors without optional turn signals have additional inboard and outboard clips.

3. Position the mirror glass to obtain a gap at the inboard edge of the mirror assembly.

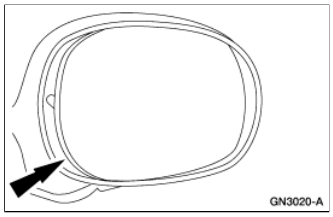

4. Release the mirror cover inboard clip.

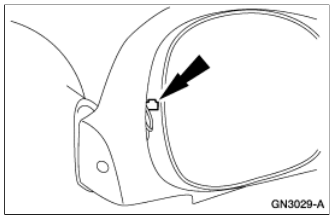

5. Position the mirror glass to obtain a gap at the outboard edge of the mirror assembly.

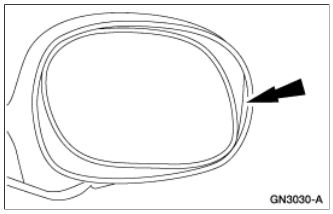

6. Remove the mirror cover.
   - Release the mirror cover outboard clip.

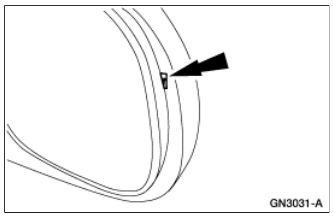

Signal Mirror

7. Remove the mirror cover.
    - Disconnect the signal mirror electrical connector.

Installation
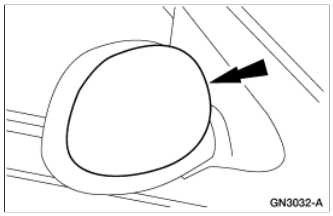
1. Install the mirror cover.
    - If equipped, connect the electrical connector.
    - Apply sufficient force to the mirror cover until it snaps into place.