

Malibu 2001-2005

Multi-Function (Combination) Switch

- REMOVAL & INSTALLATION

Removal & Installation

1. Disable the Supplemental Inflatable Restraint (SIR) system, as outlined in the Chassis Electrical Section.
2. Remove the upper and lower trim covers.
3. Disconnect the electrical connectors.
4. Release the multifunction switch clips from the stalk switch mount, remove the multifunction switch.

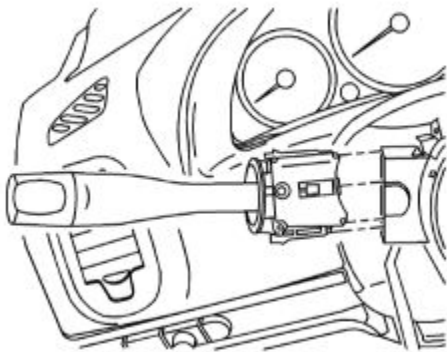


Fig. The removal and installation of the turn signal switch

To install:

1. Install the multifunction switch to the stalk switch mount.
2. Connect the electrical connectors.

3. Install the upper and lower trim covers.
4. Enable the SIR system.

[!\[\]\(3dfb8d66e81160ad61421a3452093d1b_img.jpg\) Back to Top](#)