

BLOWER MOTOR RESISTOR

Removal Procedure (C42)

1. Disconnect the electrical connector (3).
2. Remove the blower motor resistor mounting screws (1).
3. Remove the blower motor resistor (2) from the blower case.

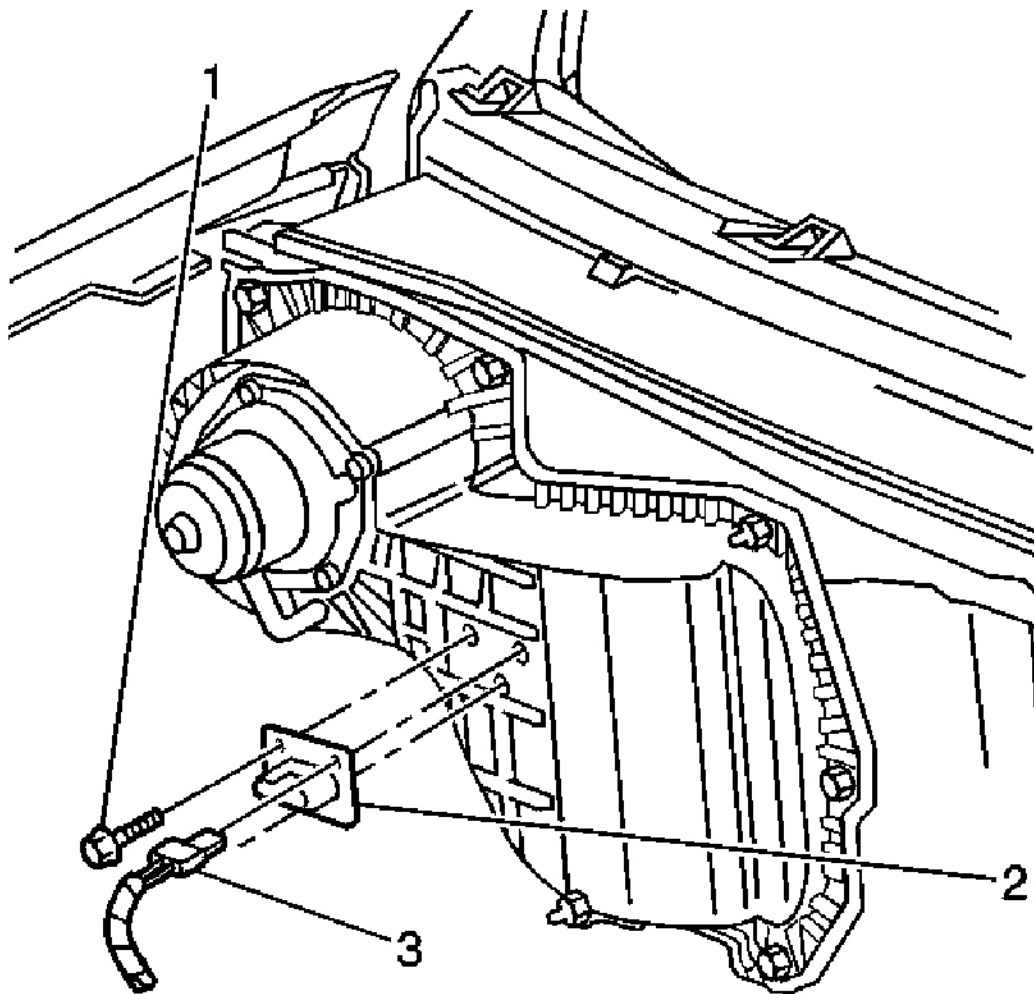


Fig. 3: Identifying Blower Motor Resistor Assembly (C42)
Courtesy of GENERAL MOTORS CORP.

Installation Procedure (C42)

1. Install the blower motor resistor (2) to the blower case.

NOTE: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.

2. Install the blower motor resistor mounting screws (1).

Tighten

Tighten the screws to 1.9 N.m (17 lb in).

3. Connect the electrical connector (3).


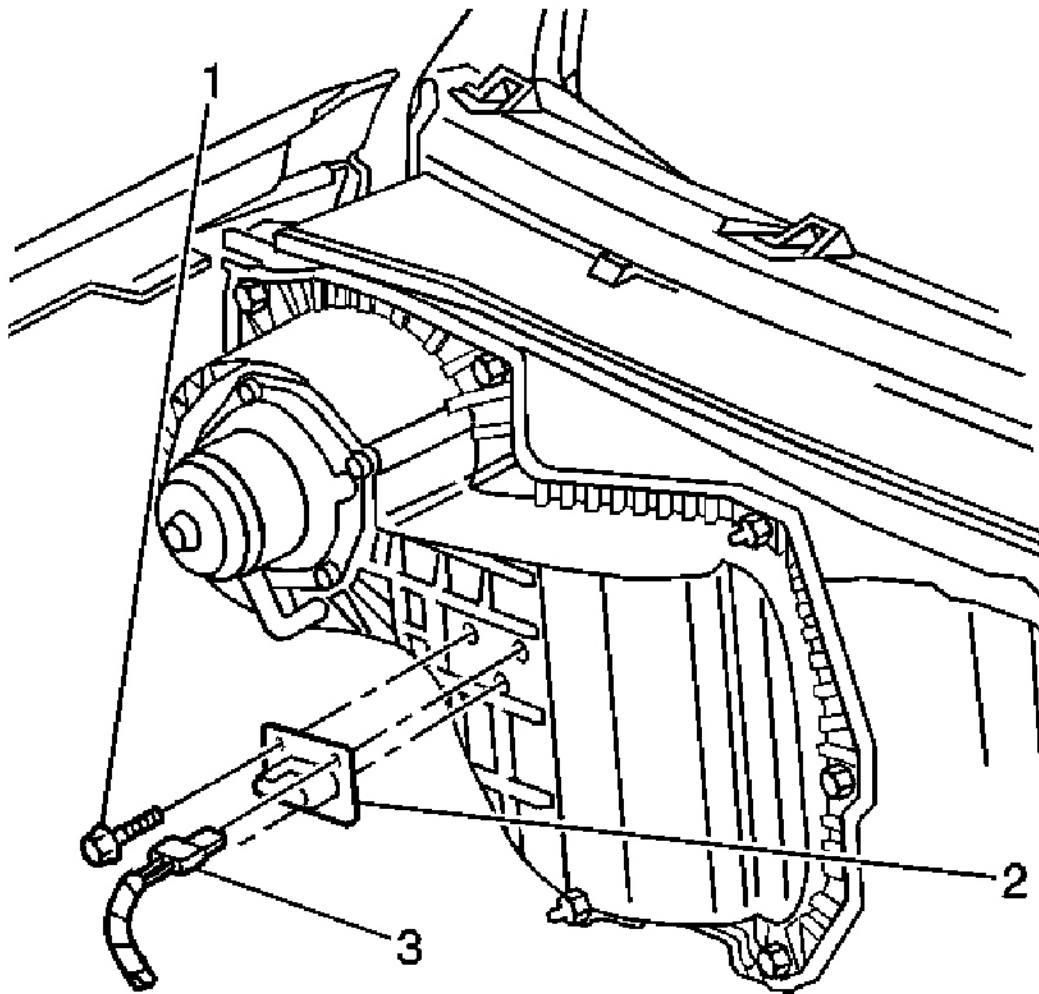


Fig. 4: Identifying Blower Motor Resistor Assembly (C42)

Courtesy of GENERAL MOTORS CORP.

Removal Procedure (C60)

1. Remove the A/C control relay bracket with the relay.
2. Remove the blower resistor harness.
3. Remove the stud from the IP, if necessary.
4. Remove the blower motor resistor mounting screw.
5. Cut the access cover from the case. Cut all four sides of the cover in order to remove the three attaching screws. Use a sharp utility knife in order to cut the case. Make the cuts straight and clean. The access cover must be reinstalled and is visible to the customer.

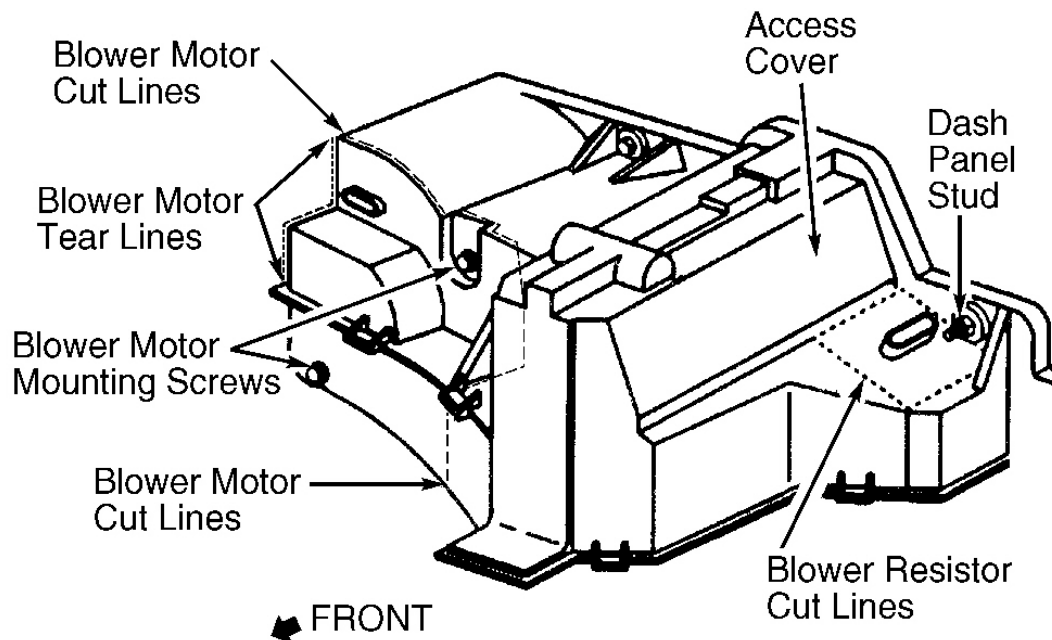

G95F60181

Fig. 5: Exploded View Of Blower Motor & Evaporator Assembly
 Courtesy of GENERAL MOTORS CORP.

6. Remove the blower motor resistor assembly.

Installation Procedure (C60)

1. Install the blower motor resistor assembly.


NOTE: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.

2. Install the blower motor resistor mounting screw.

Tighten

Tighten the screw to 1.9 N.m (17 lb in).

- Utility only- Apply a bead of black weather-strip adhesive over the cut-line areas.

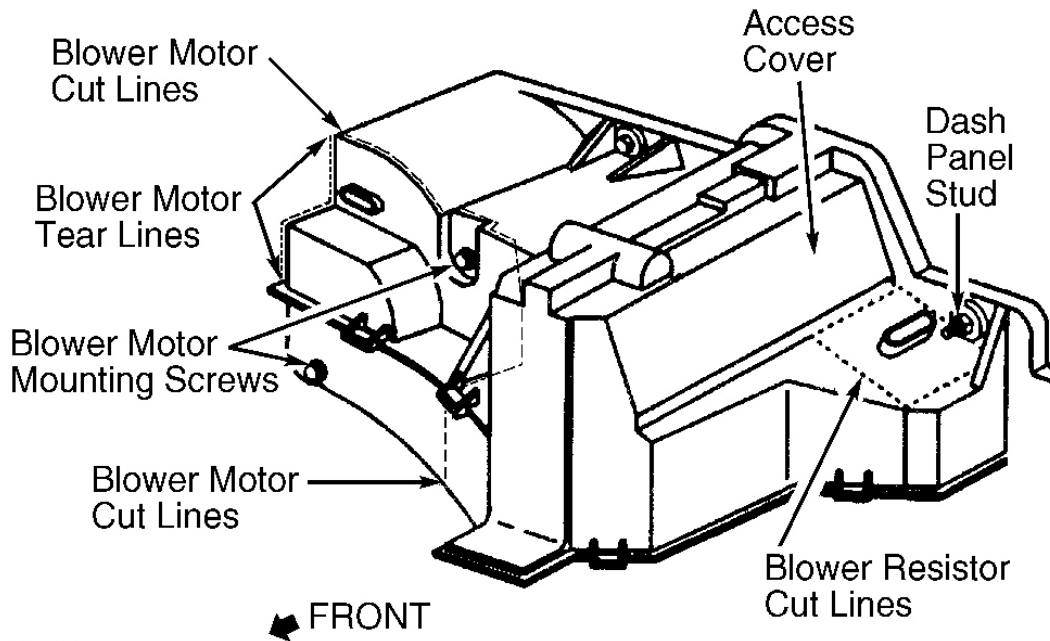

G95F60181

Fig. 6: Exploded View Of Blower Motor & Evaporator Assembly

Courtesy of GENERAL MOTORS CORP.

- Utility only- Allow the adhesive to set for 15 minutes, or until the adhesive skins over.
- Install the stud to the dash panel, if necessary.
- Install the resistor harness.
- Install the A/C relay bracket into the body.